


Typical Window Installation (USA and Canada)

Notes:

- 1) Bucks may be all 2x4 or all 2x6, or similar. Windows that have built-in flanges may need doubled side and bottom bucks, or 2x plus 1x, or so on.
- 2) Nailers can have edges sawn at about 88° (not 90°) so that settling boards are drawn tight against window trim when they are attached to nailer.
- 3) Settling boards are not attached to upper buck or window trim until after settling is complete.
- 4) After settling has stopped, caulk all joints where trim meets logs. These areas are caulked in standard 2x construction, and they will need to be caulked in log construction too.
- 5) In general, we do not use window manufacturer's "brick mold" trim. Order flat trim, or make our own trim.

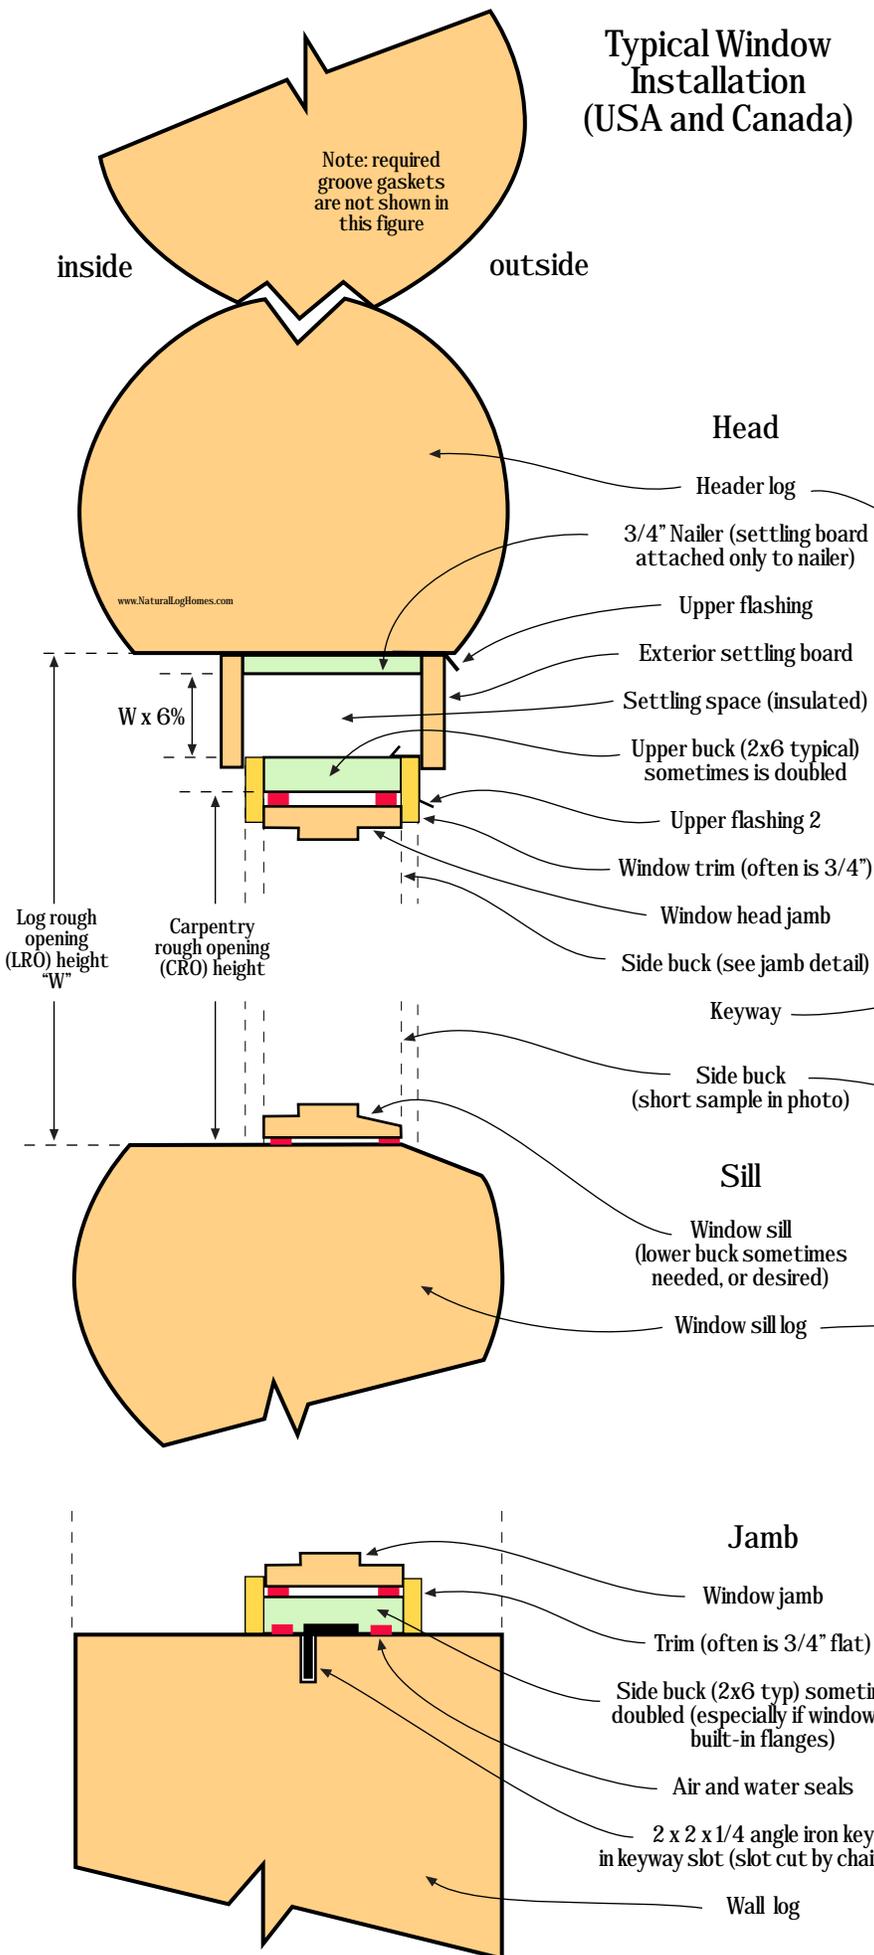

Window Installation

NLH Production Manual

© Robert W. Chambers 2004

www.NaturalLogHomes.com

+1.715.425.1739 USA